




**PRODUCTS**

Product Code	Connection Size	Range of Products	Max. Input Pressure	Pressure Setting Range
0308	1/4"	-	16 bar [ 1600 kPa ]	1 - 6 bar [ 100 - 600 kPa ]

**INTRODUCTION**

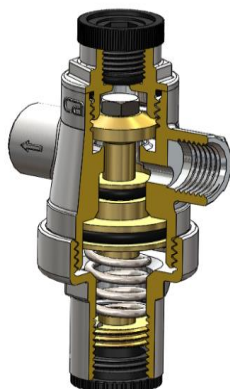

The water pressure reducer is designed to reduce the pressure of high pressure mains water to prevent damage to the installation and to the devices connected to the installation.


**DN8 Water pressure reducer is used for water treatment devices and special applications.**

**DN8 Water Pressure Reducers;**

- It prevents the noise created by pressurized water.
- Since it provides balanced pressure, the water treatment device prevents the sensitive mechanisms in beverage and coffee machines from being exposed to high pressure and prevents deformations.
- It ensures that the fluid coming out of the machine is in linear flow

\* It is not used for air and gas, only for water.

**OPERATING PRINCIPLE**

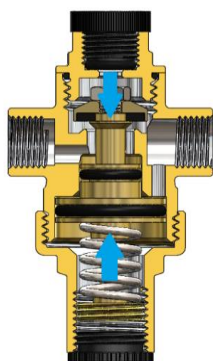

**How Water Pressure Reducer Operates;**

The operating system of water pressure reducers is based on the balance of two opposing forces

These forces:


- 1- The pressure force of the compressed spring
- 2- The pressure of the water pressure on the piston

If the pressure force of the spring is greater than the pressure applied to the piston the piston moves downwards, if it is smaller, the piston moves upwards and the output pressure is adjusted in a controlled manner.

## TECHNICAL SPECIFICATIONS


Maximum Input Pressure	:	16 bar
Pressure Setting Range	:	1 - 6 bar
Factory Outlet Pressure	:	3 bar
Maximum Temperature	:	40° C
Fluid Used	:	Water
Standard	:	EN 1567

## MATERIAL LIST

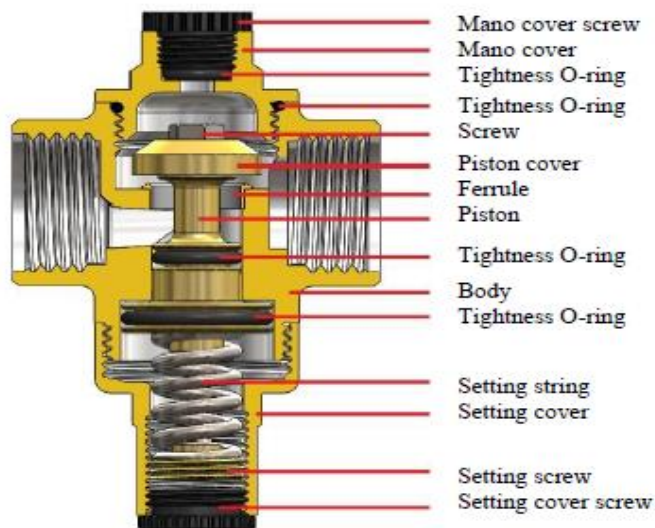

Body	:	CW 617N EN 12165
Mano Cover Screw	:	PA6
Mano Cover	:	CW 614N EN 12164
Tightness O-ring	:	NBR
Screw	:	INOX
Piston Cover	:	CW 614 N EN 12164
Piston	:	CW 614 N EN 12164
Setting Spring	:	STEEL 10270-1
Setting Cover	:	CW 617 N EN 12165
Setting Screw	:	CW 614 N EN 12164
Setting Cover Screw	:	PA6

## DIMENSIONING

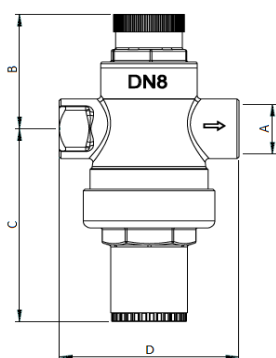

Product Code	A [inch]	B [mm]	C [mm]	D [mm]
--------------	----------	--------	--------	--------

0308	1/4"	34	54.70	46
------	------	----	-------	----


The manometer connection size in all of the water pressure reducer products is 1/4"

## FLOW RATE

Size	Flow Rate	
	m <sup>3</sup> /h	l/min
1/4" DN8	0,36	6

These flow rates are equal to 2 m/s.

## THE LOSS OF PRESSURE ACCORDING TO THE CHANGES OF THE FLOW RATE

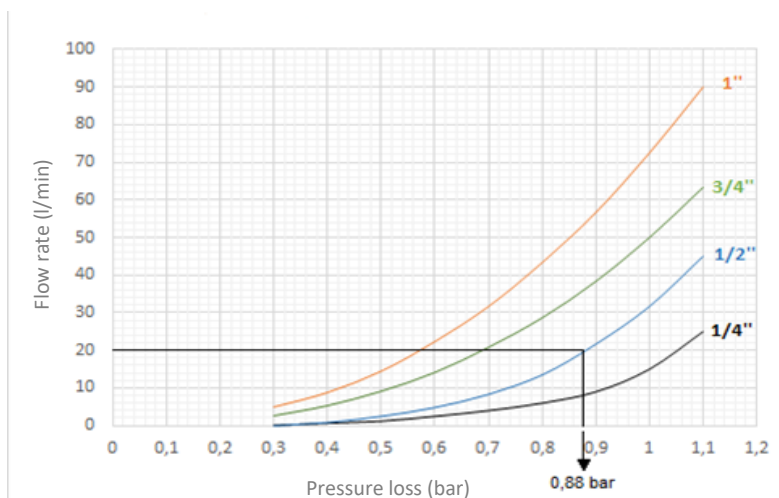


The graphic is prepared according to the conditions specified in EN 1567 standard.  
(Input pressure 8 bar - Output pressure 3 bar)

According to the diagram as the flow rate increases, the pressure loss increases and the outlet pressure decreases.


EXAMPLE: Let us consider a system using a 1/2" pressure reducer. The pressure of the water pressure reducer is P=3 bar, Q=20 l/min. Based on these values, the pressure variation is read as  $\Delta p = 0.88$  bar when the Q=20 l/min in the diagram and the point at which the curve intersects the "pressure change ( $\Delta p$ )" point. In this case it is expected that the pressure ( $P_o$ ) = 3 - 0.88 = 2.12 bar at the flow in the installation.

## CAVITATION DIAGRAM

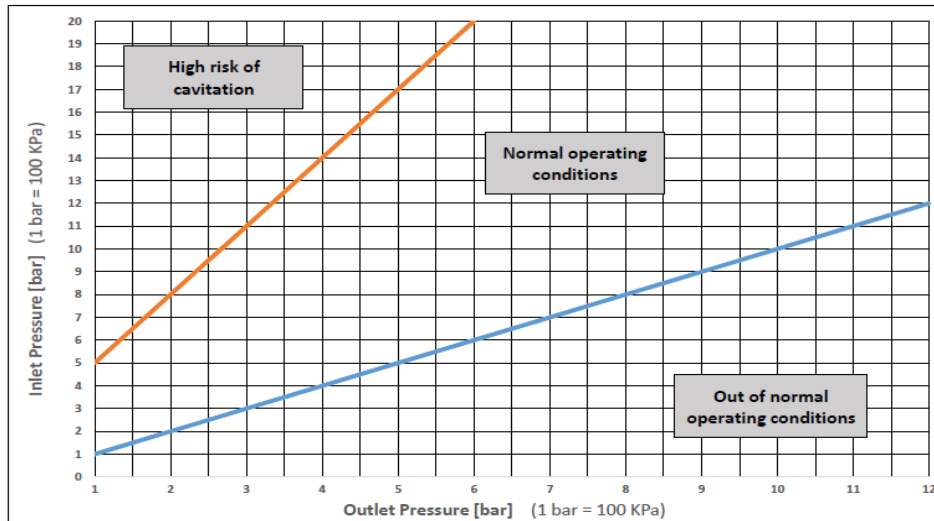

On implementations of water pressure reducer, risk of cavitation should be paid attention. In order to avoid the risk of cavitation, a gradual pressure decrease is achieved by using more than one pressure reducer. For example, an inlet pressure of 14 bar must be reduced to 3 bar. This pressure decrease corresponds to the "High Cavitation Risk" region. According to these conditions, a gradual pressure decrease should be carried out to avoid the risk of cavitation. At first, with a pressure reducer number 1, the inlet pressure of 14 bar is reduced to 6 bar, then with a pressure reducer number 2, a pressure of 6 bar is reduced to 3 bar. In this way, safe pressure decrease ensured.

## CONNECTION

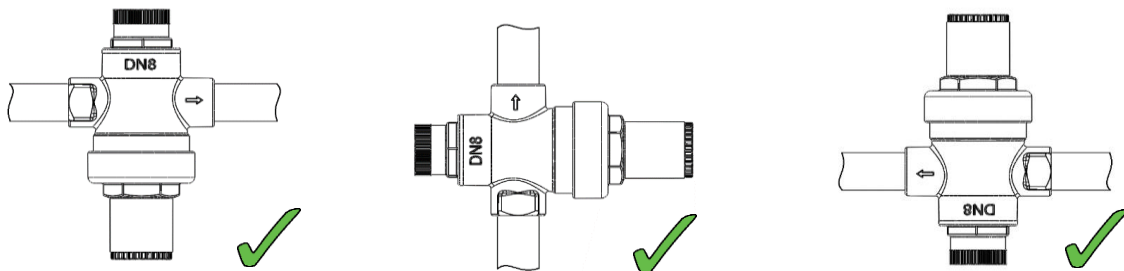

### Water Pressure Reducer Installation;

- This product can be installed; vertical, horizontal or upside-down during installation.
- Ensure that the mains water flow is switched off by closing the inlet valves before installation.
- During installation, make sure that the arrow mark on the product surface indicate the direction of water flow.
- For your product to work healthier and last longer; It is recommended to install a **filter** before the water pressure reducer.
- Products with manometer are preferred to observe the outlet pressure.

## CALIBRATION




### How to do Water Pressure Reducer Adjustment;

Water pressure reducers are calibrated to 3 bar of factory setting pressure. The setting pressure can be changed by the user if requested.

- By turning the adjustment screw;
- clockwise ( + ) to increase,
  - anticlockwise ( - ) to reduce it,
- the setting pressure is calibrated to the desired pressure value.

## APPLICATION DIAGRAM

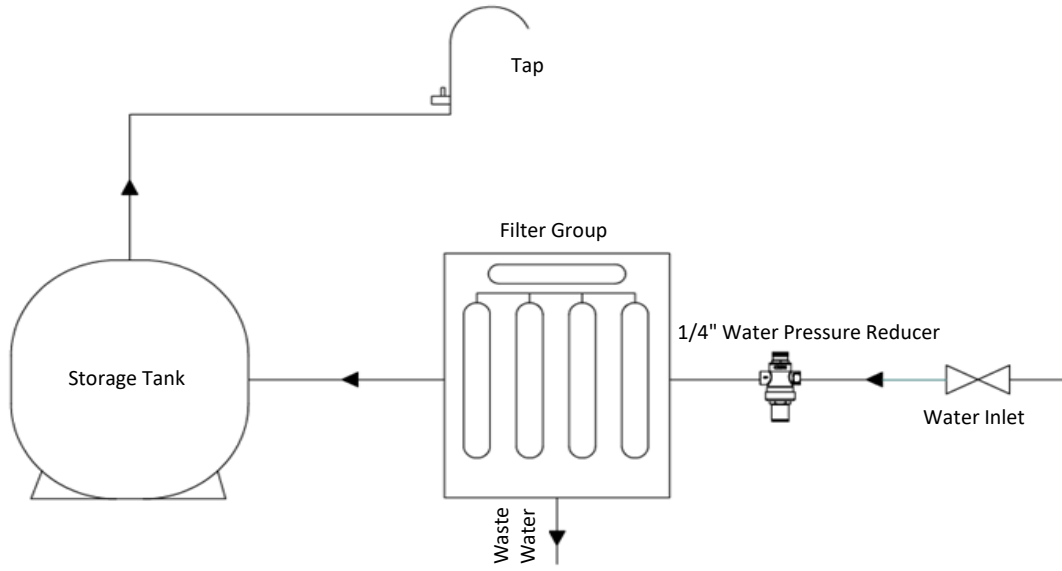

We reserve the right to make changes related data in this publication, at any time and without prior notice.